



Knowledge Base

Universal Card Reader with SIM Compatibility

For SIM Cards

Install the driver from the included mini CD or download from our website. Insert the SIM into the Universal Card Reader before connecting the USB cable to your computer. The SIM reader functions differently than other media cards and SIM cards cannot be “hot swapped”.

For Media Cards

You do not need to install a driver from the CD, your operating system will automatically install the necessary software driver. Connect the USB cable to the computer and then insert media card in to proper slot. You can “hot swap” media cards.