



## 2GB USB Flash Drive (TU1417)

### MINIMUM SYSTEM REQUIREMENTS

- Windows 2000, Windows XP, Windows Vista
- Macintosh OS 9.x or above
- Linux Kernel 2.4 or above
- USB 1.0 / 1.1 / 2.0 compliant port



### QUICK START GUIDE

#### **INSTALLING**

- While the computer is running, simply plug the USB Flash Drive into any USB port on your computer to use.
- The system will recognize and set up the driver automatically. No additional driver installation is required.
- For Windows, you will find a new drive icon “Removable Disk” or “Local Disk” installed on your system.

#### **DISCONNECTING**

You do not need to shut down your computer to disconnect the USB Flash Drive. However, to avoid potential loss of data you should close any associated windows (or files) before attempting to remove your USB Flash Drive.

#### **Removing your flash drive from a Windows computer**

Use the “Safe to Remove Hardware” icon in the Taskbar notification area.

1. Right-click on the “safe to remove hardware” icon.
2. Select the device you want to remove, and then click Stop.
3. Windows will notify you that it is safe unplug the USB Flash Drive.

#### **Removing your flash drive from a Macintosh computer**

1. Drag the removable disk to the desktop Trash icon.
2. Unplug your USB Flash Drive.

Note: Some of the 2GB storage capacity is allocated to formatting and is not available for data.

#### **Disposal Instructions**

Do not dispose of this device with unsorted household waste. Improper disposal may be harmful to the environment and human health. Please refer to your local waste authority for information on return and collection systems in your area